



# FlexCore Bollard

## CONCRETE ANCHOR INSTALLATION

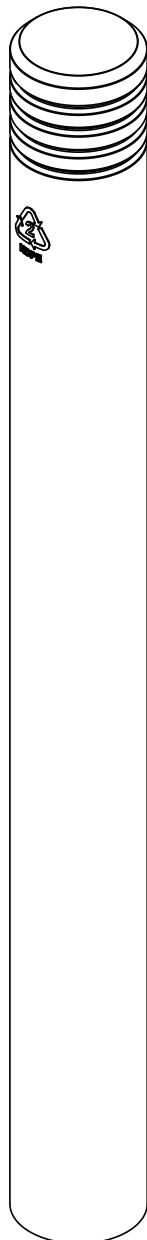


**FlexCore 4**

### Components

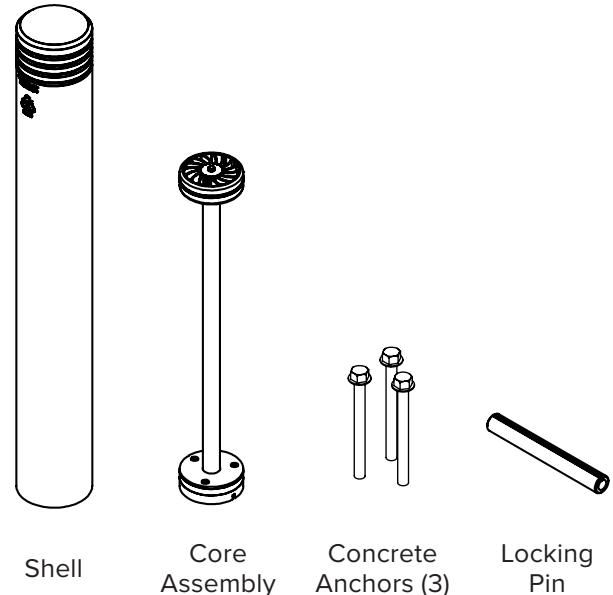

### Tools Required

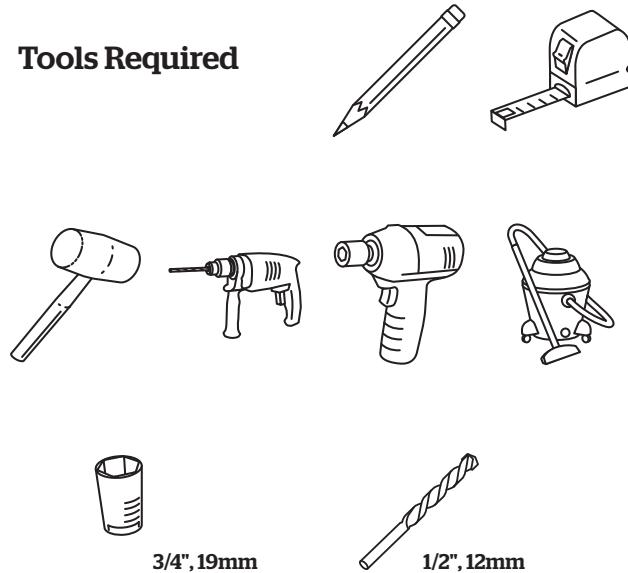



**McCue Corporation**  
Danvers, Massachusetts, USA  
+1 (800) 800 8503  
customercare@mccue.com

**McCue UK & Europe**  
Milton Keynes, United Kingdom  
+44 (0)1908 365 511  
uksales@mccue.com



**McCue Asia**  
迈客(厦门)有限公司  
Xiamen, Fujian, China  
+86-592-2200790

 [mccue.com](http://mccue.com)

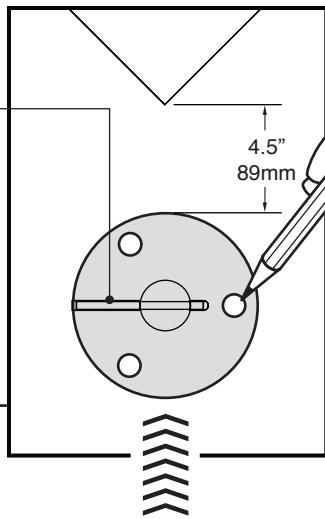


**1**NOTE PIN  
ORIENTATION**TOP VIEW**


DIRECTION OF IMPACTS

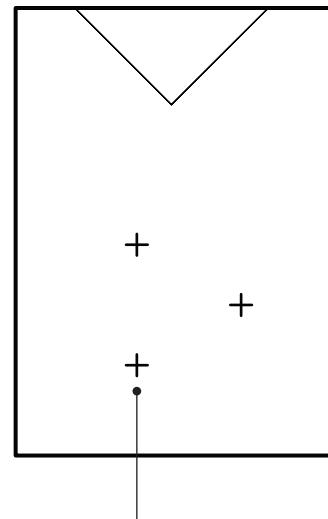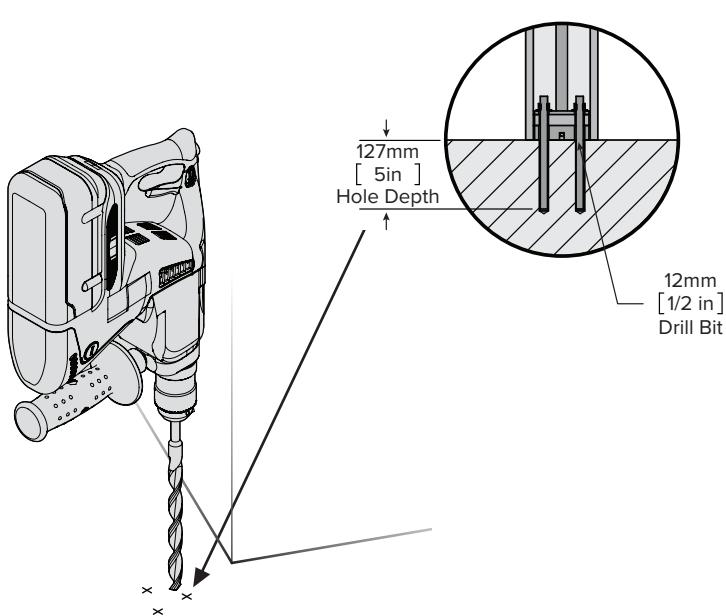**TOP VIEW****2****FlexCore 4**


3

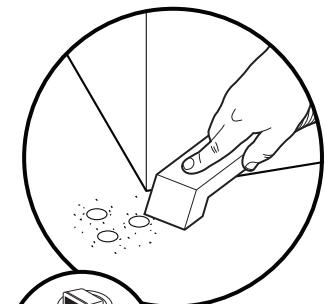


4

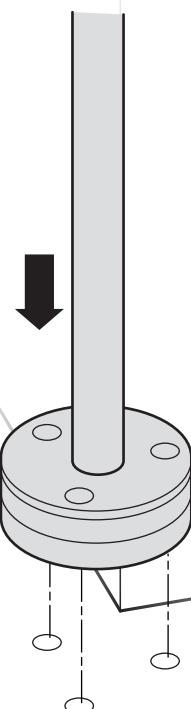


5

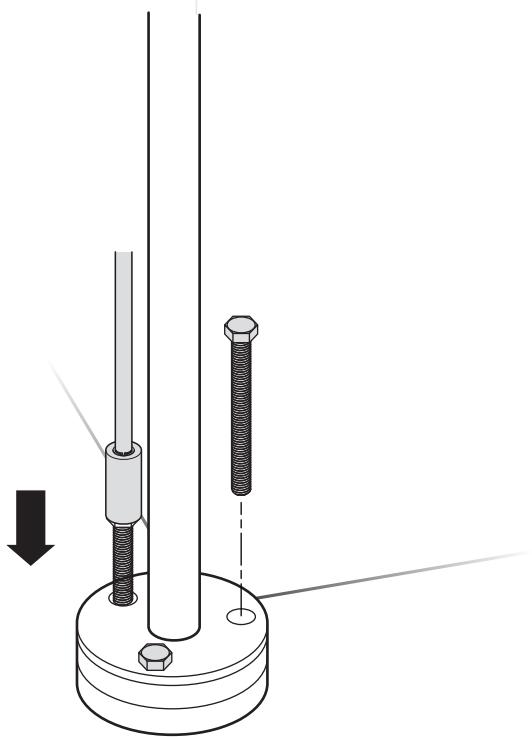

6

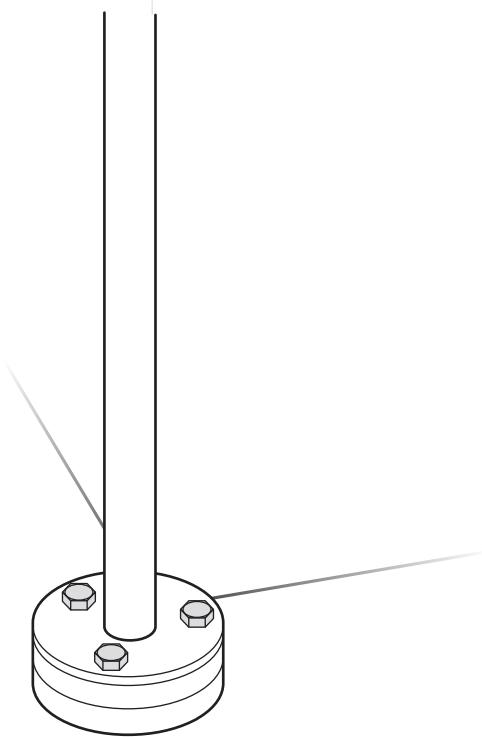

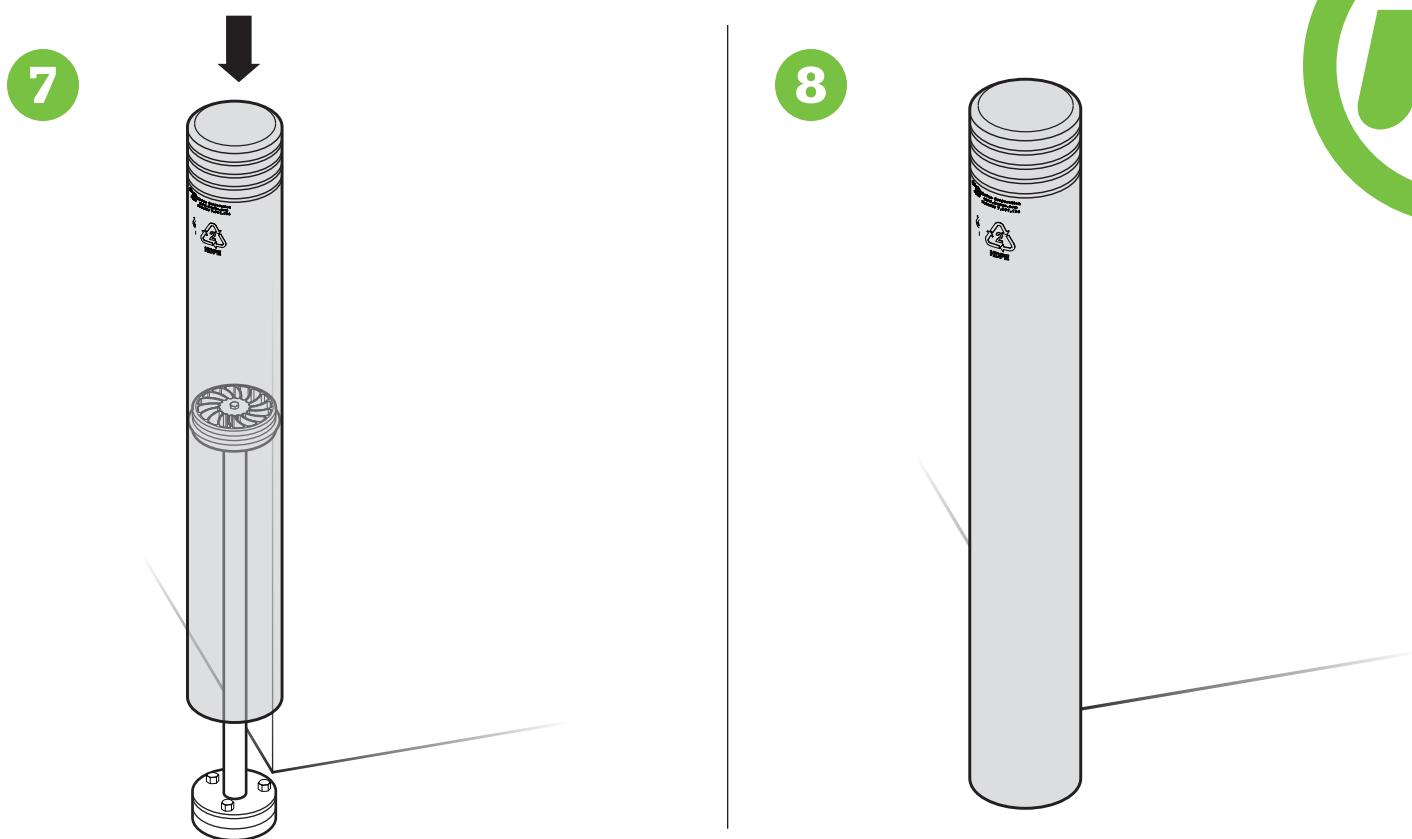

### 9 Optional

