


How to measure the radius of a "Bullnose" corner.

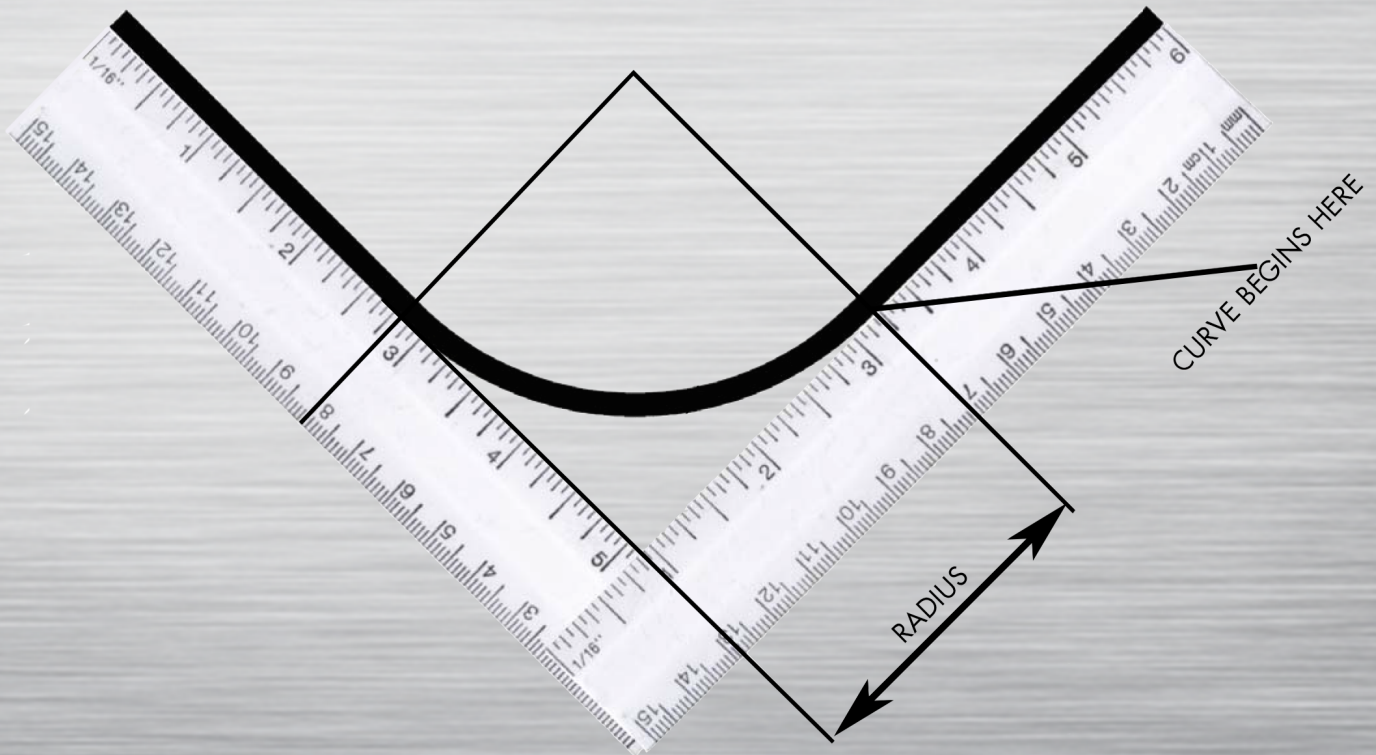

Take 2 straight edges (rulers) and lay them flush against each of the walls. Measure from the inside of your straight edge, to where the curve begins. This is the radius of the corner.

TheCornerGuardStore.com specializes in all types of corner guards: **Stainless Steel, Aluminum, Brass, Vinyl, Lexan (Plastic) and Foam Rubber. Hard Rubber, Light, Heavy Duty, or Decorative,** we are able to supply all of your **corner guard needs**. Choose and purchase from our standard products or [request a quote](#) for any of our products in a custom configuration or quantity.



Made In America

800-516-4036 | p: 763-432-3058 | f: 952-303-3773

sales@TheCornerGuardStore.com