Installation Instructions 1500WG Reveal

Please read all instructions before installing wall guard.

Material must be stored, installed and used in environmentally controlled conditions.

1. Slip reveal over locator surface on End Caps, Inside and Outside Corners. **See Fig. 1 & 2**.


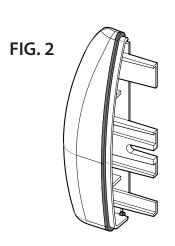


FIG. 3

FIG.1

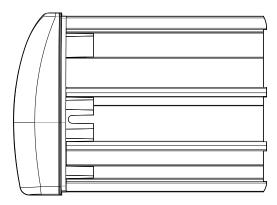

 Attach End Caps and Corners to retainer, leaving 1/16" gap between Return/Corner and retainer allowing for adjustment. See Fig. 3.
Note: Cut cover to length between the reveal pieces on the returns and/or corners.

IPC.1502/REV.1

S80 W18766 Apollo Drive • Muskego, Wisconsin 53150 USA inprocorp.com Nationwide 800.222.5556 / Fax 888.715.8407 International Sales 262.679.5521 / Fax 262.679.5524

