

# Installation Instructions

## Flexible Wall Guards

Please read all instructions before installing wallguard.

### ITEM DESCRIPTION

#### Cartguard 1

MB10 1" [25.4mm] Mounting Base, 8' [2.4M]

MB10HB Hook Mounting Base

MT15FX 1" [25.4mm] Flexible Top -  
72' [21.9M] coil or 8' [2.4M] length

ME10 Snap-on End Cap

MC10 Snap-on 90° Outside Corner

MC1045 Snap-on 135° Outside Corner

MC10CC Snap-on Custom Angle Corner

ME10DS Quick Stop End Cap

#### Cartguard 2

MB20 2" [50.8mm] Mounting Base, 12' [3.7M]

MT25FX 2" [50.8mm] Flexible Top -  
72' [21.9M] coil or 12' [3.7M] length

ME20 Snap-on End Cap

MC20 Snap-on 90° Outside Corner

MC2045 Snap-on 135° Outside Corner

MC20CC Snap-on Custom Angle Corner

ME20DS Quick Stop End Cap

Material must be stored, installed and used in environmentally controlled conditions

#### Cartguard 1

- [ 1 ] Cut the retainer to the required length allowing for end caps, 90° outside corners, 135° outside corners and snap-on end caps.
- [ 2 ] Attach the retainer to the substrate with #8 sheet metal screws, using the pre-drilled holes on the retainer. Screw length is determined by the substrate thickness.
- [ 3 ] Snap ends caps and corners on to the retainer and attach them with installer supplied #8 sheet metal screws.
- [ 4 ] Cut the flexible vinyl retainer to the distance between the end caps and corners.
- [ 5 ] Snap the flexible vinyl onto the retainer.

#### Cartguard 2

- [ 1 ] Cut the retainer to the required length allowing for end caps, 90° outside corners, 135° outside corners and snap-on end caps.
- [ 2 ] Attach the retainer to the substrate with #8 sheet metal screws every 12" [304.8mm] Screw length is determined by the substrate thickness.
- [ 3 ] Snap ends caps and corners on to the retainer and attach them with installer supplied #8 sheet metal screws.
- [ 4 ] Cut the flexible vinyl retainer to the distance between the end caps and corners. [
- [ 5 ] Snap the flexible vinyl onto the retainer.

IPC.377/rev.4

IPC® Door + Wall Protection

inpro.com • 800.222.5556 • 262.679.9010

World Headquarters S80 W18766 Apollo Drive, Muskego, WI 53150 USA


Installation Hotline: 866.394.6776

**inpro**®

# Installation Instructions

## Flexible Wall Guards

Please read all instructions before installing wallguard.

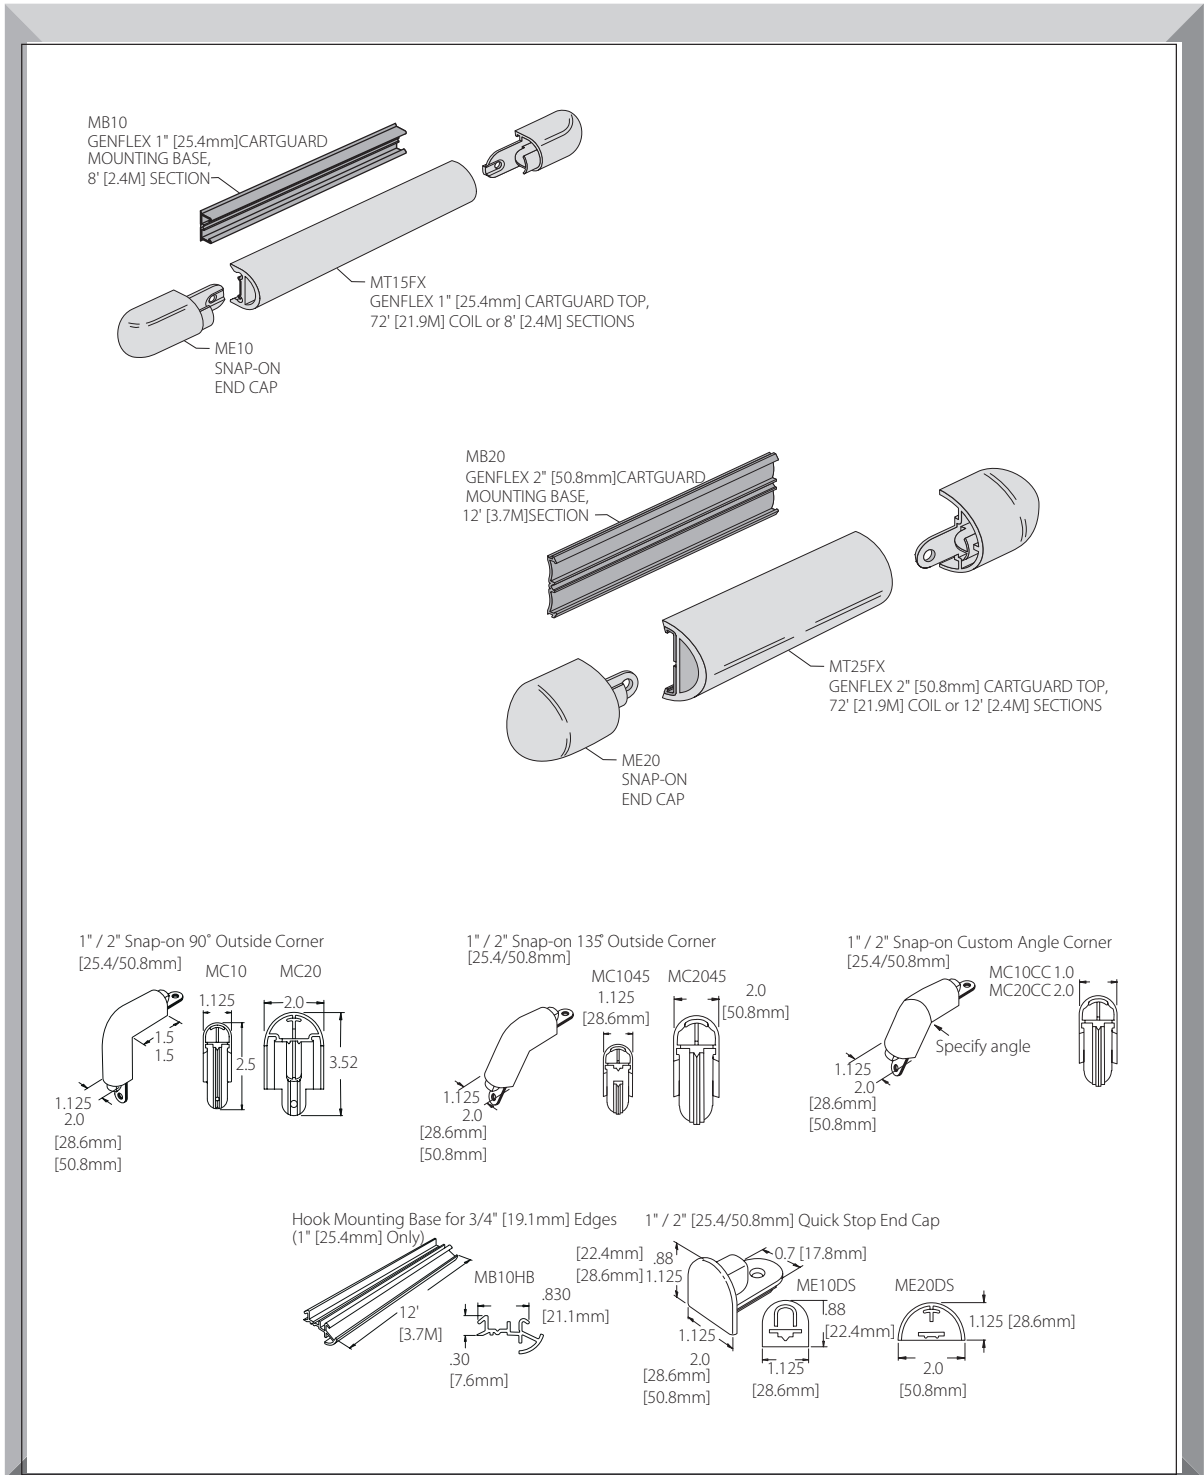

IPC® Door + Wall Protection

inpro.com • 800.222.5556 • 262.679.9010

World Headquarters S80 W18766 Apollo Drive, Muskego, WI 53150 USA

Installation Hotline: 866.394.6776

**inpro**®