Installation Instructions 1800WG Reveal


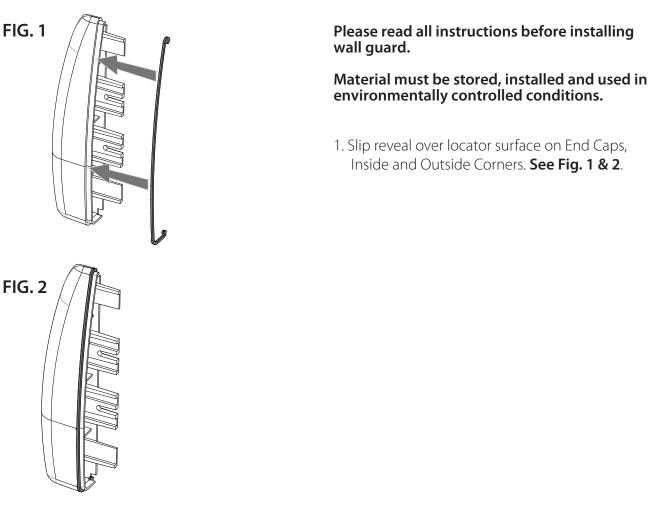


FIG. 3



 Attach End Caps and Corners to retainer, leaving 1/16" gap between Return/Corner and retainer allowing for adjustment. See Fig. 3.
Note: Cut cover to length between the reveal pieces on the returns and/or corners.

S80 W18766 Apollo Drive • Muskego, Wisconsin 53150 USA inprocorp.com Nationwide 800.222.5556 / Fax 888.715.8407 International Sales 262.679.5521 / Fax 262.679.5524

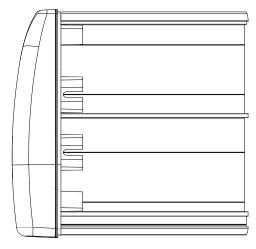

IPC.1512/REV.1