

Pro-Tek®

Impact Protection Systems

Specialty Corner Guards/Wall Guards

Installation of: **CG-34, CG-12, CG-13, CG-14**

(Adhesive, double faced tape, or metal screws must be specified.)

1. Adhesive or Tape:

Install with ADH-30-1 adhesive 120 sq. ft. per gallon with (3) coats (2) coats on wall and (1) coat on the corner guard.] or double faced tape (ADH-4042).

ADH-30-1 recommended for painted drywall and plaster surfaces. Allow to dry until tacky and install by working from floor to ceiling. When applying over unpainted drywall, it is important to seal the wall boards with a wallpaper "sizing". When installing CG-34, CG-12, CG-13 or CG-14 over vinyl wall covering, remove vinyl wall covering before installation.

2. With Screws (or anchors if required):

Rigid vinyl Corner Guards will be supplied with (6) countersunk holes per length and 1-1/2" oval head screws for drywall installations. For masonry installations, 1" oval head countersunk screws with alligator®, or similar plastic anchors should be used.

For tape installations, remove protective paper and install from the floor upward.

Installation of: **CR-44, CR-46, CR-48**
CR-64, CR-66, CR-68
CR-84, CR-86, CR-88

(Adhesive, double faced tape, or metal screws must be specified.)

1. Adhesive or Tape:




Install with ADH-30-1 adhesive 120 sq. ft. per gallon with (3) coats [(2) coats on wall and (1) coat on the corner guard.] or double faced tape (ADH-4042).

ADH-30-1 recommended for painted drywall and plaster surfaces. Allow to dry until tacky and install by working from floor to ceiling. When applying over unpainted drywall, it is important to seal the wall boards with a wallpaper "sizing". When installing CR- style Wall Guards over vinyl wall covering, remove vinyl wall covering before installation.

2. With Screws (or anchors if required):

Rigid vinyl Wall Guards will be supplied with (6) countersunk holes per length and 1-1/2" oval head screws for drywall installations. For masonry installations, 1" oval head countersunk screws with Toggler Alligator®, or similar plastic anchors should be used.

For tape installations, remove protective paper and install from the floor upward.

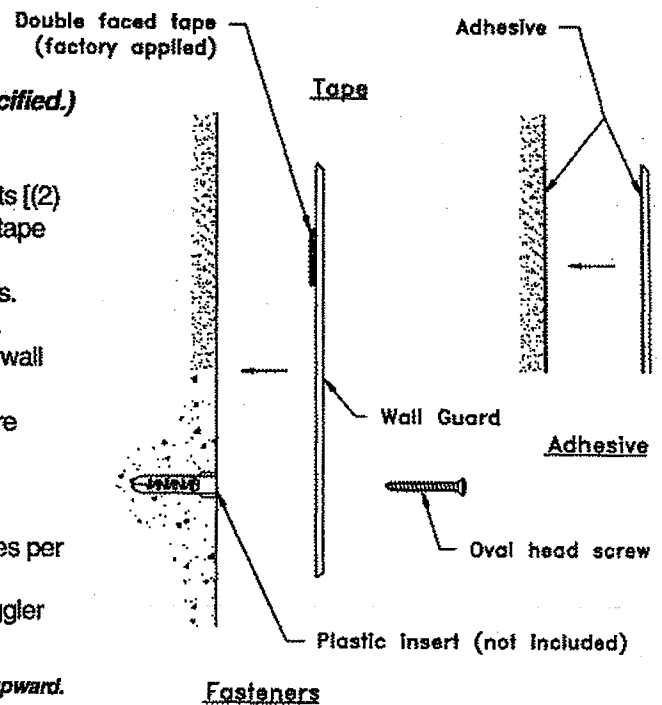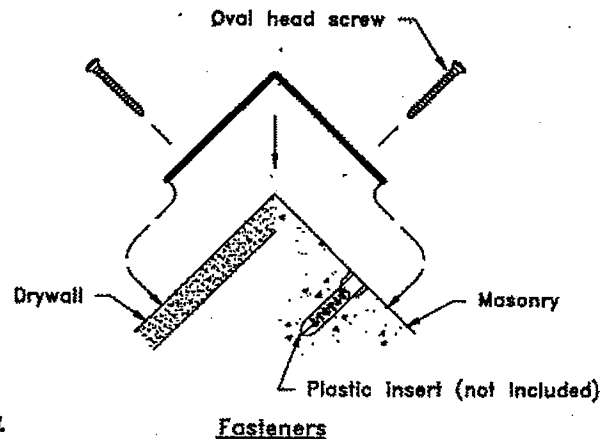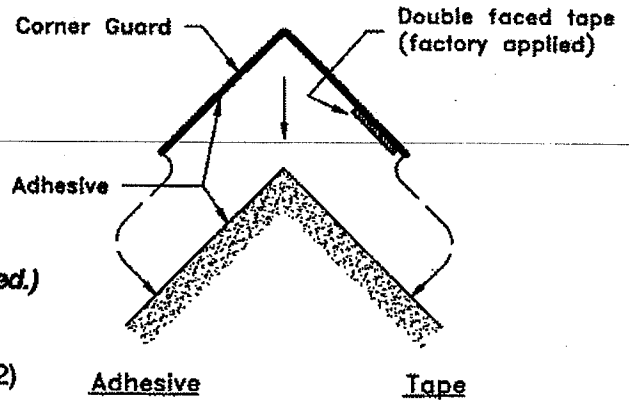

Specifications subject to change without notice.



Pawling Corporation
Standard Products Division
Borden Lane, P. O. Box 200
Wassaic, NY 12592

Tel 914-373-9300
Tel 800-431-3456
Fax 800-377-4403
Internet www.pawling.com